
## **Installation Manual FlexFit EndStop**

No drilling in profile required.

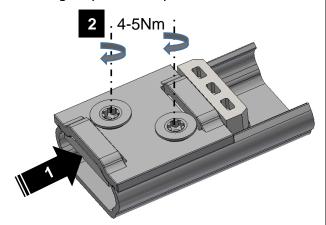


- 3. Insert End Stop into profile.
- 4. Tighten both bolts with correct torque.

#### Warnings:

Use together with FlexFit profile only. Endstop has to be fully inserted. Installation may result into damage of ball track of profile.

Maximum impact specified on www.thomasregout.com

# **Installation Manual FlexFit EndStop**No drilling in profile required.

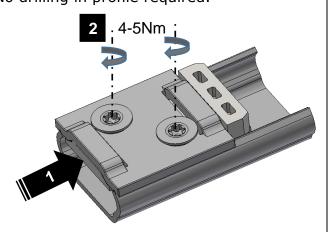

- 7. Insert End Stop into profile.
- 8. Tighten both bolts with correct torque.


#### Warnings:

Use together with FlexFit profile only. Endstop has to be fully inserted. Installation may result into damage of ball track of profile.

Maximum impact specified on <a href="https://www.thomasregout.com">www.thomasregout.com</a>

### **Installation Manual FlexFit EndStop**

No drilling in profile required.

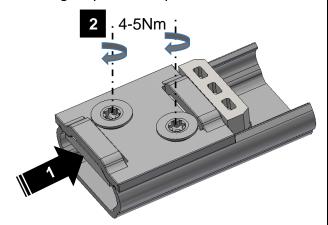

- 5. Insert End Stop into profile.
- 6. Tighten both bolts with correct torque.

#### Warnings:

Use together with FlexFit profile only. Endstop has to be fully inserted.


Installation may result into damage of

Installation may result into damage of ball track of profile.

Maximum impact specified on www.thomasregout.com

# **Installation Manual FlexFit EndStop**

No drilling in profile required.

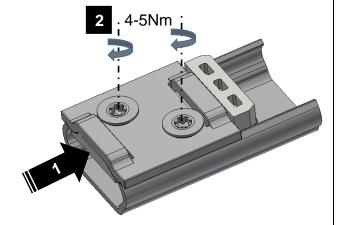

- 9. Insert End Stop into profile.
- 10. Tighten both bolts with correct torque.

#### Warnings:

Use together with FlexFit profile only. Endstop has to be fully inserted. Installation may result into damage of ball track of profile.

Maximum impact specified on <a href="https://www.thomasregout.com">www.thomasregout.com</a>